





# A RÉCHAUFFER TOUT SIMPLEMENT...

**1** Vérifiez le bon niveau d'eau sur la jauge présente à côté de l'écran de contrôle du steamer. Si besoin, contactez la réception.

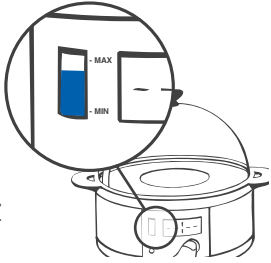

**2** Appuyez sur « Start & Cook » et suivez les instructions. Sélectionnez votre langage.

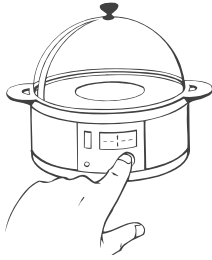

**3** **Important :** retirez le couvercle du bocal



**4** Soulevez la cloche, déposez le bocal ouvert dans l'appareil. Puis replacez la cloche



**5** Appuyez sur « Start & Cook », l'appareil va identifier le plat et démarrer la chauffe



**6** Le décompte terminé, retirez le plat à l'aide de la pince... bon appétit !!!



**NB :** L'appareil s'éteint automatiquement


▲ Ne pas toucher la cloche, les surfaces chaudes ni les aliments en cours de cuisson, des brûlures pouvant être occasionnées. Tenir hors de portée des enfants.




# A TASTE OF PLEASURE THE SIMPLY WAY




**1** Check the water level on the gauge next to the control screen. Please contact the reception if necessary.

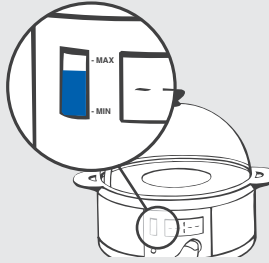

**2** Press « Start & Cook » and follow the instructions. Select the language.

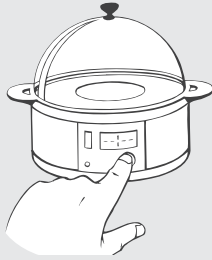


**3** **Important :** Remove the lid from the jar




**4** Lift up the clutch, place the open jar in the steamer and cover.



**5** Press « Start & Cook », the steamer identifies the dish, its Best Before Date and the ideal reheating time.

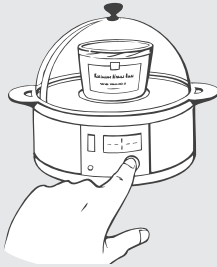

**6** After a few minutes, 2 bips let you know your dish is ready : lift up the clutch, take off the jar with the clamp and enjoy your meal.

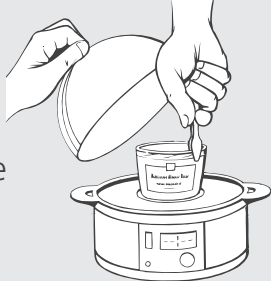

**NB :** The steamer will switch off automatically

▲ Don't touch the clutch, hot surfaces or food being cooked which can cause burn. Keep out of the reach of children.